

NOTE: This instruction sheet is for informational purposes only. Your working environment may differ from what is shown in the pictures. Please determine the location of wiring and plumbing before you begin. It is your responsibility to ensure proper installation and, if in doubt, contact customer service. While our products are designed for homeowner installation, you assume all risk associated with the installation process. You may view Installation Videos at <https://closetvids.com>

Drawer Installation



STOP!



Watch the installation video at:
www.closetvids.com

FASTENERS

These are the fasteners used in the assembly of Perfect Spaces Storage Systems:



Drawer Face Screw



Wood Screws
(1 1/4", 2", 3")



Rafix Connector Stud



Sharpie
(1/2" & 3/4")



Shelf Pin



Pan Head Screw
(5/8")



EZ Anchor




L-Bracket



Mending Plate



Euro Screws
(Short / Long)

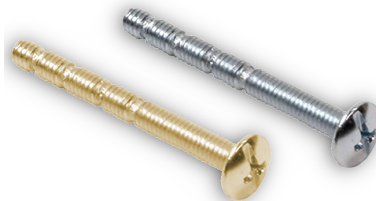

Breakaway Screws (Gold / Silver)

When purchasing your first closet you will receive a supply of fasteners adequate to complete the installation of your storage system. On your next closet order you will need to include a parachute bag stocked with a supply of fasteners. Please see the "Parachute Bags & Fasteners" guide/video for details.




Need more installation information?

Scan this QR code for detailed procedures and helpful technical tips in our full installation manual.

Consult your printed materials to confirm placement of your drawers and begin by installing your slides, starting from the bottom. **This procedure varies slightly depending on whether you are working with soft closing or ball bearing drawer slides so this guide will cover both.**

Soft Closing Drawers

Depending on the type of drawer box your system is optioned with you may or may not need to install spacers between the slides and the drawer boxes. If your box corners are dovetailed you will not need to use the spacers, you can install the slides directly on the system holes using euro screws.

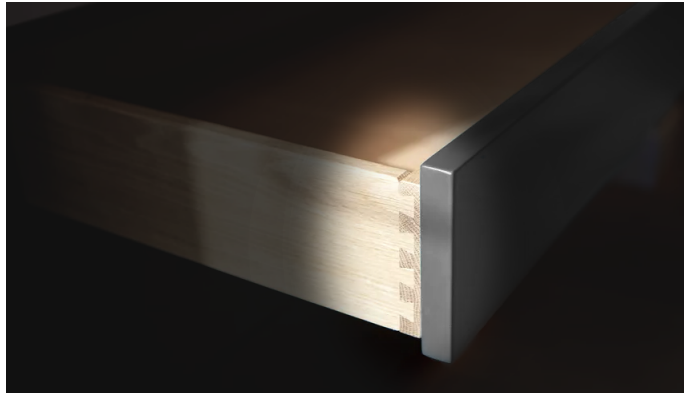

Dovetailed drawer box corner; no spacer required.

If your drawer boxes are not dovetailed, you'll need to install spacers. Place a spacer over each system hole where the bottom drawer slide is to be installed. Fasten the spacer to the vertical panel using long euro screws in the system holes.



Place the slide into place with the drawer catch positioned toward the rear of the unit and the front of the slide lined up just inside the front edge of the panel. Fasten the slides to the spacers using three quarter inch sharpie screws. Install them through the 2nd of the top holes in the slide into the uppermost of the small holes in the spacer.



Once the slides are installed, attach the front locking clips to the underside of the drawer box. The front locking clips are marked left/right to identify where to install them. Align them in the front corners of the box and install three 5/8" sharpie screws in each one of them.



Line up the cutouts of the drawer box with the slide rails. Rest the drawer on the rails and then push it into place. The drawer can be removed by squeezing the green levers on the front clips while lifting.

Ball Bearing Drawers

To install ball bearing slides begin by separating the slides into two pieces by fully extending the rails and then squeeze the black lever while pulling.



The rails with the black lever are to be attached to the drawer box. The rail should be flush with the bottom with a minimal reveal in the front, approximately $\frac{3}{32}$ ". Attach the rail to the box using $\frac{5}{8}$ " sharpie screws. Use the elongated screw holes so there can be adjustments made later if needed.



Next, install the outer portion of the slide onto the vertical panel using **short** euro screws in the pre-drilled system holes. Once they're mounted the drawer will slide into place and lock onto the rails.




Drawer Faces

Starting with the top drawer, place two strips of double-sided adhesive mounting tape on the front of the drawer box, one on each side.




Line up the drawer face so that the reveals are equal on both sides. The top shelf should be covered halfway. Once it is lined up, press the drawer face onto the drawer box so that it sticks to the adhesive.

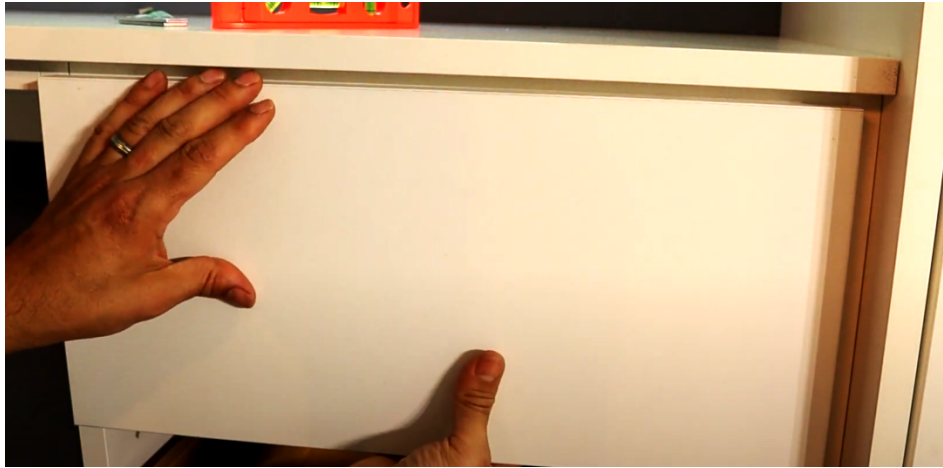

Pull the drawer out and install two drawer face screws from the inside of the box to attach the face to the drawer box. Do this on a soft surface to avoid scuffing the drawer face.



Install the drawer and then proceed to follow the same steps with the drawers below. Use mending plates between the drawer faces to achieve the appropriate spacing.

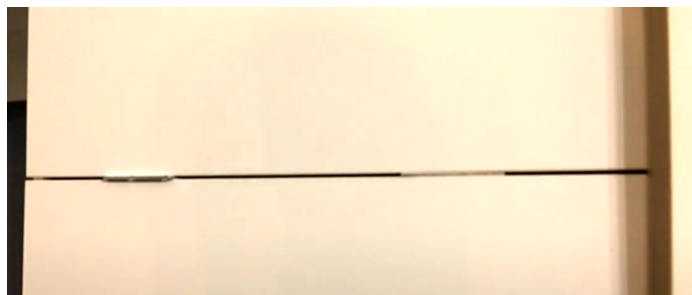

Once your drawers are installed you can install your pulls/knobs using a 5mm (or 3/16") drill bit.

Shelves Above Drawers

In most cases there will be a fixed shelf mounted above your drawers. To help you install the shelf on the correct system holes, here is a guide showing you where to install the Rafix connector studs for the shelf-above depending on your top drawer's height:

