

NOTE: This instruction sheet is for informational purposes only. Your working environment may differ from what is shown in the pictures. Please determine the location of wiring and plumbing before you begin. It is your responsibility to ensure proper installation and, if in doubt, contact customer service. While our products are designed for homeowner installation, you assume all risk associated with the installation process. You may view Installation Videos at <https://closetvids.com>

Hole Counting Reference

For Rafx Connector Stud Placement



STOP!



Watch the video at:
www.closetvids.com




← Rafix Connector Stud

*Attempting to uninstall a stud can result in blemishes, so please double check placement.


All Units

Regardless of whether the unit is wall or floor mounted, Rafix Connector Studs should always be installed in the top holes of vertical panels.

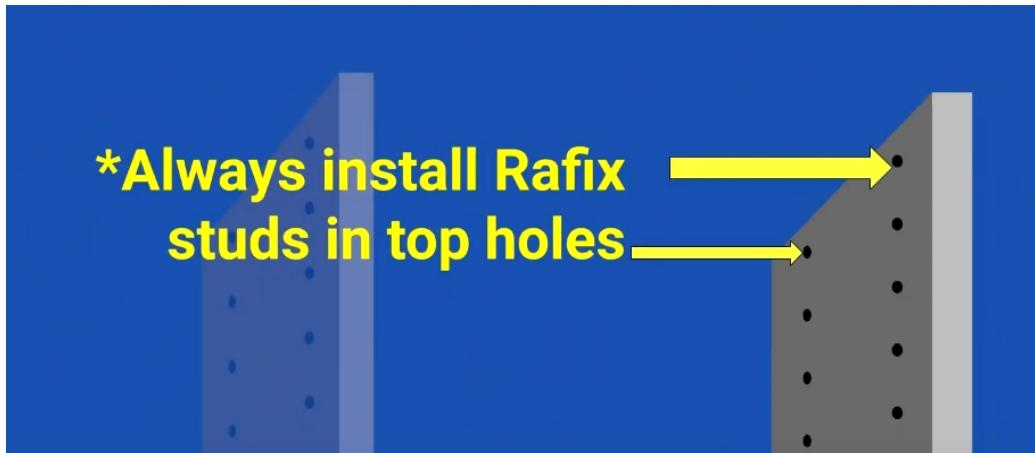


Floor Mounted Units

Floor mounted units will have a toe kick below the bottom shelf so Rafix studs should be installed in the third holes from the bottom.


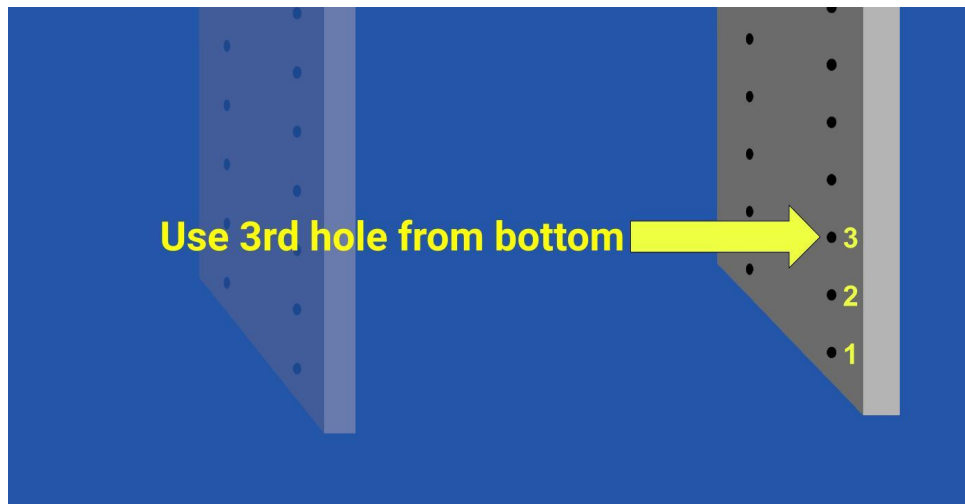


Wall Mounted Units

Stud placement at the bottom of wall mount units may vary. If the bottom of your unit is to be a **fixed shelf** you should put the studs in the bottom holes.

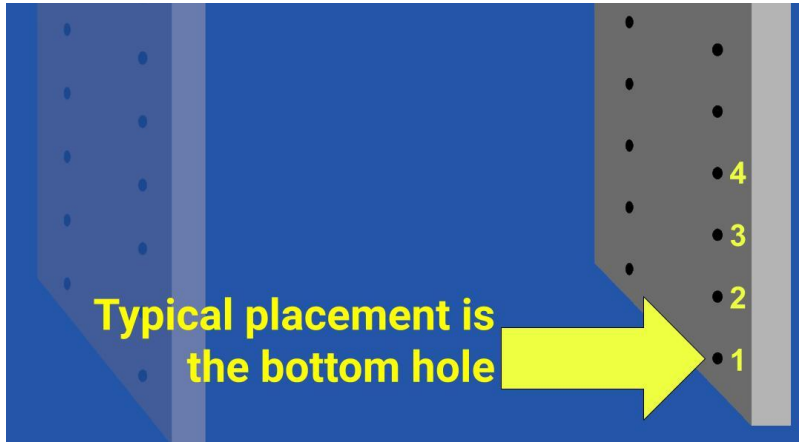


For units with a **wardrobe rod**, install studs in the 4th hole from the bottom.

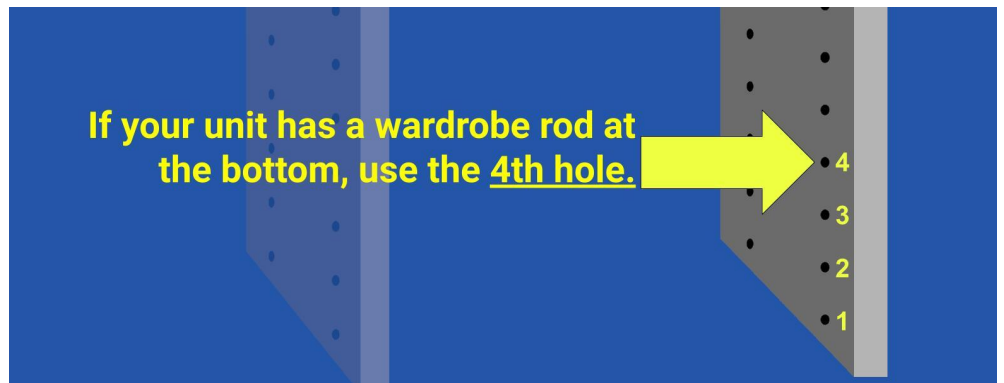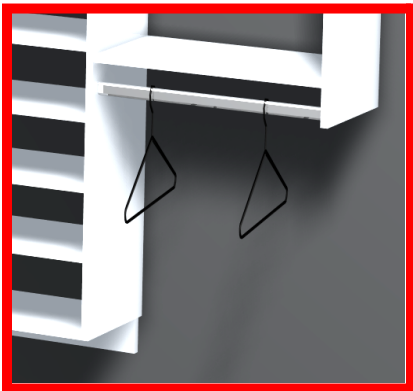


Shelves above sliding baskets

Studs for shelves above sliding baskets should be installed 2 holes above slide rails.

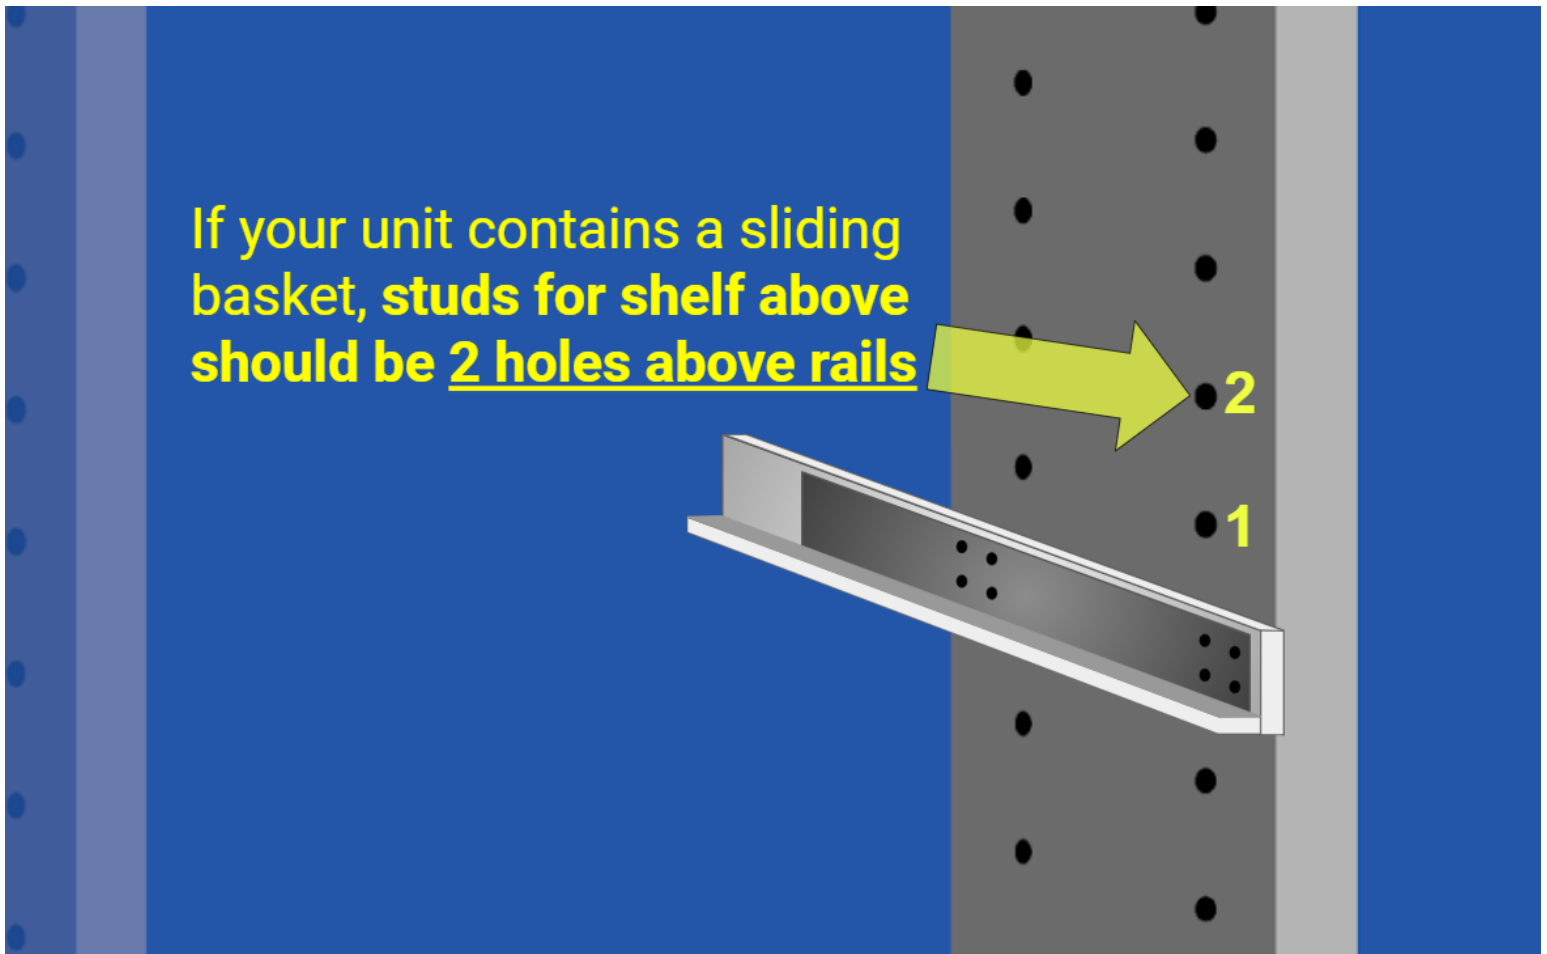

Shelves above drawers

Stud placement for shelves above drawers depends on the height of the top drawer.

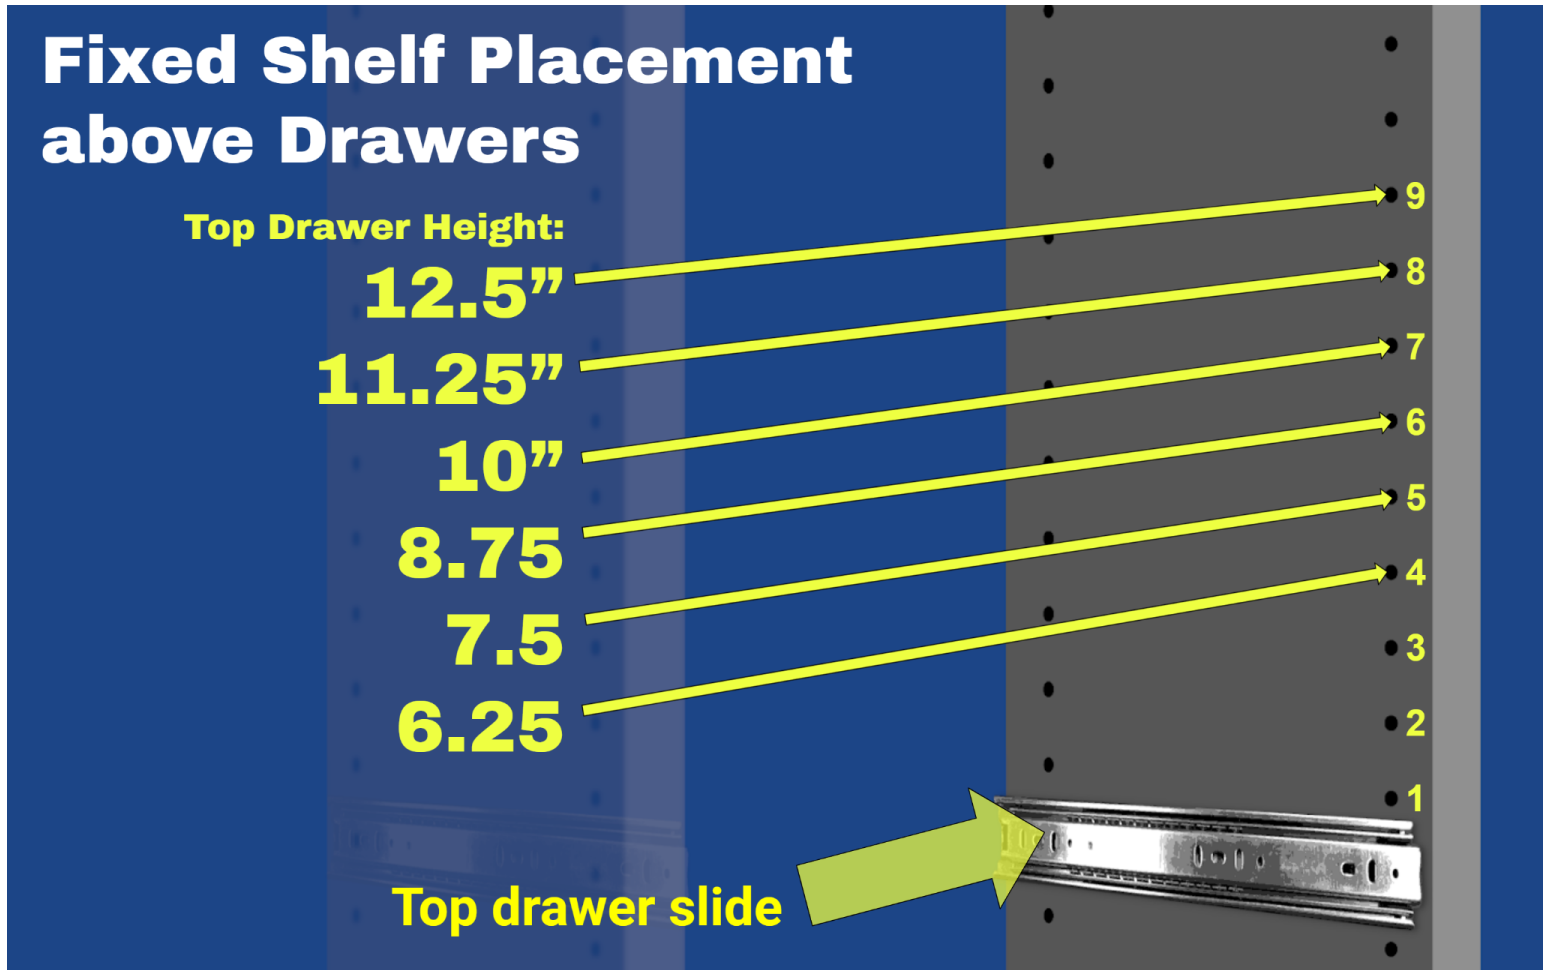

Need more information?

Detailed procedures and helpful technical information can be found in our installation manual:

