

NOTE: This instruction sheet is for informational purposes only. Your working environment may differ from what is shown in the pictures. Please determine the location of wiring and plumbing before you begin. It is your responsibility to ensure proper installation and, if in doubt, contact customer service. While our products are designed for homeowner installation, you assume all risk associated with the installation process. You may view Installation Videos at <https://closetvids.com>

Island Assembly



STOP!



Watch the video at:
www.closetvids.com

FASTENERS

These are the fasteners used in the assembly of Perfect Spaces Storage Systems:



Drawer Face Screw



Wood Screws
(1¼", 2", 3")



Rafix Connector Stud



Sharpie
(½" & ¾")



Shelf Pin



Pan Head Screw
(⅝")



EZ Anchor



L-Bracket



Mending Plate



Euro Screws
(Short / Long)



Breakaway Screws (Gold / Silver)

When purchasing your first closet you will receive a supply of fasteners adequate to complete the installation of your storage system. On your next closet order you will need to include a parachute bag stocked with a supply of fasteners. Please see the "Parachute Bags & Fasteners" guide/video for details.



Need more installation information?

Scan this QR code for detailed procedures and helpful technical tips in our full installation manual.


This installation requires basic tools including:

- Screws, fasteners and anchors (as found in your parachute bag)
- Level (use the longest one possible)
- Phillips Head Screwdriver
- Tape Measure
- Power Drill
- Countersink Drill Bits
- #2 Square Drive Bit


Your island will have two island vertical panels along with a partition which forms the center spine of the island. Vertical panels will receive **Rafix connector studs**.



Identify the top and bottom of each vertical panel. The top will be banded, the bottom will not. Install a Rafix connector stud in **each top hole**, each **third** hole from the bottom, and **each center hole**.

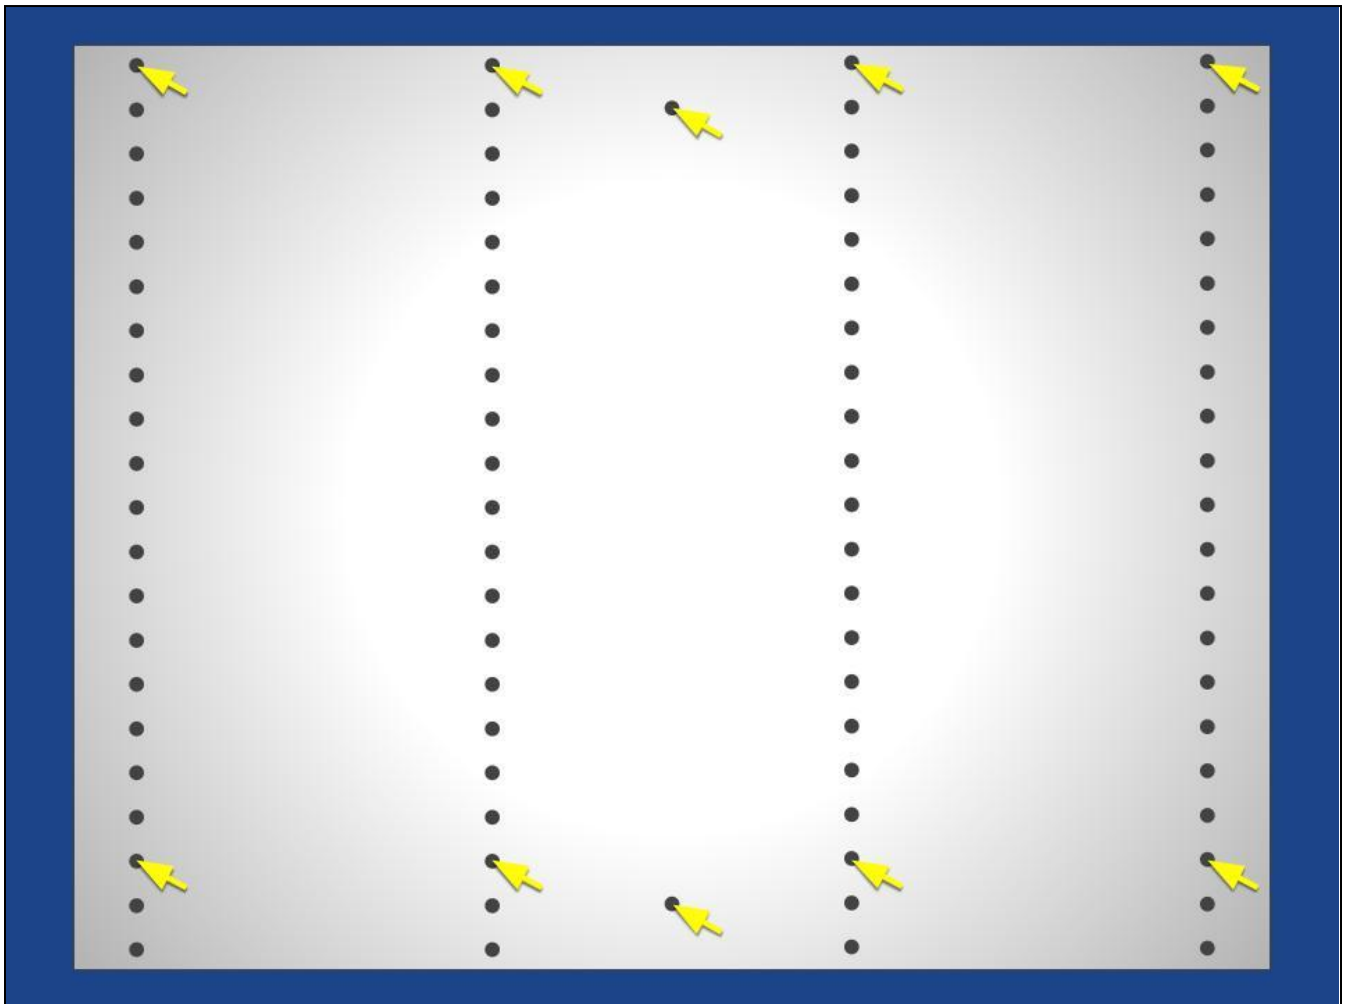

Attach the partition to the panels by sliding the cams onto the studs and then turn clockwise to tighten.

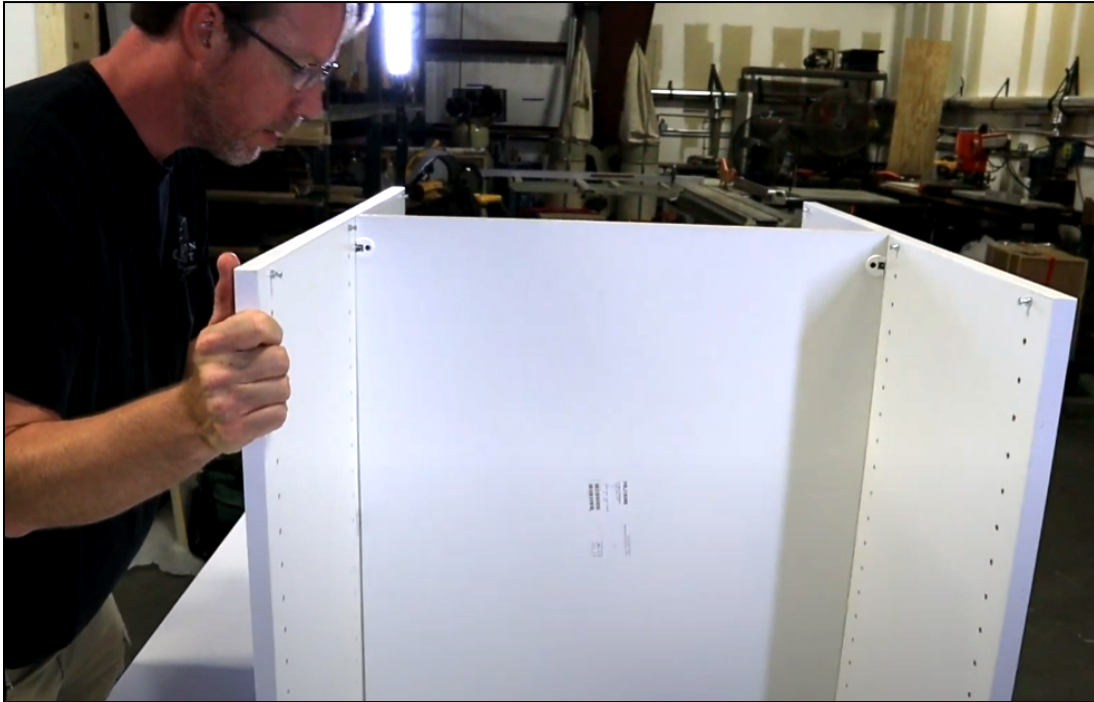

Lower the top shelves into place and tighten them.



Install the toe kick onto the bottom shelves by lining up the toe kick on the underside of the bottom shelf so that it is flush on the edges and touching the rafix connector housing.



Then install 3" wood screws in the predrilled holes, being very careful not to over tighten them.



Install the bottom shelves by placing the rear cams on the rear studs and tighten them, then lower the front of the shelf until the front cams click into place.



Place your countertop on top of the island. Centered it so that there are reveals of 1/2" on the sides and 1" on the front and rear. Set your drill bit depth so that it does not go all the way through the countertop and pre-drill four holes from below, two on each side.



Fasten the countertop in place using 1-1/4" screws.

*Refer to our other guides/videos to learn how to install other components your island might be optioned with such as drawers, doors, or other accessories.